



FD Trinitron
WEGA[®]

Operating Instructions

KV-32FS120
KV-36FS120

WARNING

To reduce the risk of fire or electric shock, do not expose the TV to rain or moisture.



This symbol is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

Note to the CATV Installer

This reminder is provided to call the CATV system installer’s attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building as close to the point of cable entry as practical.

SAFETY PRECAUTIONS

- ☐ Operate the TV only on 120 V AC.
- ☐ One blade of the power plug is wider than the other for safety purposes and will fit into the power outlet only one way. If you are unable to insert the plug fully into the outlet, contact your dealer.
- ☐ If any liquid or solid object falls into the TV, unplug it and have it checked by qualified personnel before operating it further.

CAUTION

When using TV games, computers, and similar products with your TV, keep the brightness and contrast functions at low settings. If a fixed (non-moving) pattern is left on the screen for long periods of time at a high brightness or contrast setting, the image can be permanently imprinted onto the screen. Continuously watching the same channel can cause the imprint of station logos onto the TV screen. These types of imprints are not covered by your warranty because they are the results of misuse.



To reduce the risk of electric shock, do not use this polarized plug with an extension cord, receptacle, or other outlet unless the blades can be fully inserted to prevent blade exposure.



Pursuant to FCC regulations you are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

NOTIFICATION

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference with radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- ☐ Reorient or relocate the receiving antennas.
- ☐ Increase the separation between the equipment and receiver.
- ☐ Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- ☐ Consult the dealer or an experienced radio/TV technician for help.

Protecting the TV

- ☐ To prevent internal heat build-up, do not block the ventilation openings.
- ☐ Do not install the TV in a hot or humid place, or in a place subject to excessive dust or mechanical vibration.

Note on Caption Vision

This television receiver provides display of television closed captioning in accordance with § 15.119 of the FCC rules. Use of this television for other than private viewing of programs broadcast on UHF or VHF or transmitted by cable companies for the use of the general public may require authorization from the broadcaster-cable company and/or program owner.

Owner’s Record

The model and serial numbers are located on the front cover of this manual and at the rear of your TV.

Trademarks and Copyrights



As an ENERGY STAR® Partner, Sony Corporation has determined that this product meets the ENERGY STAR® guidelines for energy efficiency. ENERGY STAR is a registered mark.



SRS and the (●)® symbol are trademarks of SRS Labs, Inc.



Manufactured under license from BBE Sound, Inc. Licensed by BBE Sound, Inc. under USP 4638258, 5510752 and 5736897. BBE and BBE symbol are registered trademarks of BBE Sound, Inc.

WEGA, FD Trinitron and Steady Sound are registered trademarks of Sony Corporation.

IMPORTANT SAFEGUARDS

For your protection, please read these instructions completely, and keep this manual for future reference. Carefully observe and comply with all warnings, cautions and instructions placed on the set, or described in the operating instructions or service manual.

WARNING

To guard against injury, the following basic safety precautions should be observed in the installation, use, and servicing of the set.

Use

Power Sources

This set should be operated only from the type of power source indicated on the serial/model plate. If you are not sure of the type of electrical power supplied to your home, consult your dealer or local power company. For those sets designed to operate from battery power, refer to the operating instructions.



 
Grounding or Polarization

This set may be equipped with a polarized alternating current line plug (a plug having one blade wider than other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.




For the set with a three-wire grounding type AC plug

This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to have a suitable outlet installed. Do not defeat the safety purpose of the grounding plug.



Overloading

 Do not overload wall outlets, extension cords or convenience receptacles beyond their capacity, since this can result in fire or electric shock.



Always turn the set off when it is not to be used. When the set is left unattended and unused for long periods of time, unplug it from the wall outlet as a precaution against the possibility of an internal malfunction that could create a fire hazard.

Do not disconnect the antenna or the power cord during a heavy storm. Lightning may strike while you are holding the cable or cord, causing serious injury. Turn off your TV and wait for the weather to improve.

Object and Liquid Entry

Never push objects of any kind into the set through the cabinet slots as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spill liquid of any kind on the set.



 
Corrosion

Use of this TV near the seashore may subject the set to excessive salt, corrosion and internal damage and result in deterioration of the TV's performance. If the set will be subjected to these conditions, steps should be taken to reduce the humidity and temperature of the area where the TV is located.

Attachments

Do not use attachments not recommended by the manufacturer, as they may cause hazards.

Do not place any objects, especially heavy objects, on top of the set. The object may fall from the set, causing injury.



Cleaning

Unplug the set from the wall outlet before cleaning or polishing it. Do not use liquid cleaners or aerosol cleaners. Use a cloth lightly dampened with water for cleaning the exterior of the set.



If a snapping or popping sound from a TV set is continuous or frequent while the TV is operating, unplug the TV and consult your dealer or service technician. It is normal for some TV sets to make occasional snapping or popping sounds, particularly when being turned on or off.



Installation

Always use two or more people to lift or move the set. The set is heavy and the bottom surface is flat. Serious injury can result from trying to move the set by yourself alone, or from unsteady handling.

Install the set on a stable, level surface.

Water and Moisture

Do not use power-line operated sets near water — for example, near a bathtub, washbowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, etc.



Accessories

Do not place the set on an unstable cart, stand, tripod, bracket, table, or shelf. The set may fall, causing serious injury to a child or an adult, and serious damage to the set. Use only a cart or stand recommended by the manufacturer for the specific model of TV. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.



 
Ventilation

The slots and openings in the cabinet and in the back or bottom are provided for necessary ventilation. To ensure reliable operation of the set, and to protect it from overheating, these slots and openings must never be blocked or covered.

- Never cover the slots and openings with a cloth or other materials.



- Never block the slots and openings by placing the set on a bed, sofa, rug or other similar surface.



- Never place the set in a confined space, such as a bookcase or built-in cabinet, unless proper ventilation is provided.



- Do not place the set near or over a radiator or heat register, or where it is exposed to direct sunlight.



Power-Cord Protection

Do not allow anything to rest on or roll over the power cord, and do not place the set where the power cord is subject to wear or abuse.



Antennas

Outdoor Antenna Grounding

 
If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits.

WHEN INSTALLING AN OUTDOOR ANTENNA SYSTEM, EXTREME CARE SHOULD BE TAKEN TO KEEP FROM CONTACTING SUCH POWER LINES OR CIRCUITS AS CONTACT WITH THEM IS ALMOST INVARIABLY FATAL.

Be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Section 810 of the National Electrical Code (NEC) in USA and Section 54 of the Canadian Electrical Code in Canada provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

Antenna Grounding According to the NEC

Antenna Grounding According to the National Electrical Code, ANSI/NFPA 70.

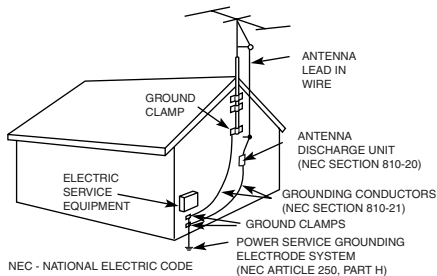

Lightning

For added protection for this television receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna. This will prevent damage to the receiver due to lightning and power-line surges.

Service

Damage Requiring Service

Unplug the set from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power cord or plug is damaged or frayed.



 
- If liquid has been spilled into the set or objects have fallen into the product.



- If the set has been exposed to rain or water.



- If the set has been subject to excessive shock by being dropped, or the cabinet has been damaged.



- If the set does not operate normally when following the operating instructions. Adjust only those controls that are specified in the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the set to normal operation.



- When the set exhibits a distinct change in performance — this indicates a need for service.

Servicing

Do not attempt to service the set yourself since opening the cabinet may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.



Replacement Parts

When replacement parts are required, be sure the service technician certifies in writing that he has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards.



Safety Check

Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition, and to so certify. When the set reaches the end of its useful life, improper disposal could result in a picture tube implosion. Ask a qualified service technician to dispose of the set.



Contents

Introduction

Introducing the FD Trinitron WEGA® Features	1
About this Manual.....	2
Batteries for the Remote Control.....	2
Front Panel Menu Controls	2

Using the Remote Control

Remote Control Description.....	3
---------------------------------	---







Connecting Your TV

TV Rear Panel	5
Basic Connections	6
Connecting Additional Equipment.....	7

Using Basic Functions

Setting Up the TV.....	17
Quick Start to the Menus	18

 Using the Menus

How to Access Menus.....	21
Using the Video  Menu.....	22
Using the Audio  Menu	23
Using the Channel Setup  Menu.....	25
Using the Parental Control  Menu.....	27
Parental Control.....	28
United States: Selecting Custom Rating Options.....	30
Canada: Selecting Custom Rating Options.....	32
Using the Timer  Menu	33
Using the Setup  Menu.....	34

Other Information

Troubleshooting.....	35
Specifications	38

Index.....	39
------------	----

Introduction

Congratulations on your purchase of the Sony FD Trinitron WEGA®.

Introducing the FD Trinitron WEGA® Features

Some of the features you will enjoy include:

 
- ❑ **FD Trinitron Flat CRT** — Delivers a picture with uncompromising accuracy and outstanding image detail via a technologically advanced tube.
- ❑ **YPbPr Inputs** — Provides component video inputs for superior picture quality (480i only).
- ❑ **BBE** — Gives sound more impact by using audio technology to compensate for phase effects in speakers.
- ❑ **SRS** — Produces a dynamic three-dimensional sound for stereo programs.
- ❑ **Parental Control (V-Chip)** — Helps parents monitor what their children watch on TV by establishing rating limits.
- ❑ **ClearEdge VM** — Sharpens picture definition to give objects a crisp, clean edge.
- ❑ **Favorite Channels** — Provides instant access to your favorite channels with the touch of a button.
- ❑ **Info Banner** — Displays the name and the remaining time of the current program viewed, if available.
- ❑ **Energy Star®** — Meets the Energy Star guidelines for energy efficiency.
- ❑ **Front Panel Controls** — Allows access to the on-screen menus without the use of a remote control.
- ❑ **Front A/V Inputs** — Lets you quickly connect video games, camcorders, or stereo/mono equipment.


About this Manual


This manual provides instructions to help you enjoy your new TV. It shows you how to connect to an antenna or cable, cable box, VCR, DVD, satellite receiver, stereo system, or camcorder. Once your TV is connected, follow the instructions and use the remote control to access the on-screen menus.

Batteries for the Remote Control

 
Insert two AA (R6) batteries (supplied) into the remote control using the following illustration as a guide.

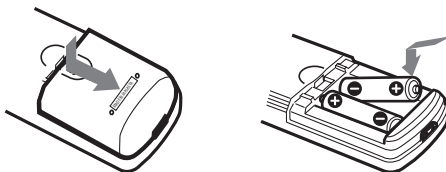


 


 Under normal conditions, batteries will last up to six months. If the remote control does not operate properly, the batteries might be worn out.

 If you will not be using the remote control for an extended period of time, remove the batteries to avoid possible damage from battery leakage.

Front Panel Menu Controls



 
The front panel controls allow you to access the menu without the remote control.

- ☐ Press  MENU to display the on-screen menu.
- ☐ Use the  and  buttons on the front panel instead of your remote control.
- ☐ Use the  button on the front panel to navigate through the menus, then select an item. The front panel controls also allow you to change your channels (CH+/-), adjust the volume (VOL +/-), and change video inputs.




 To navigate the menus with your remote control, see “Using the Menus” on page 21.


Using the Remote Control

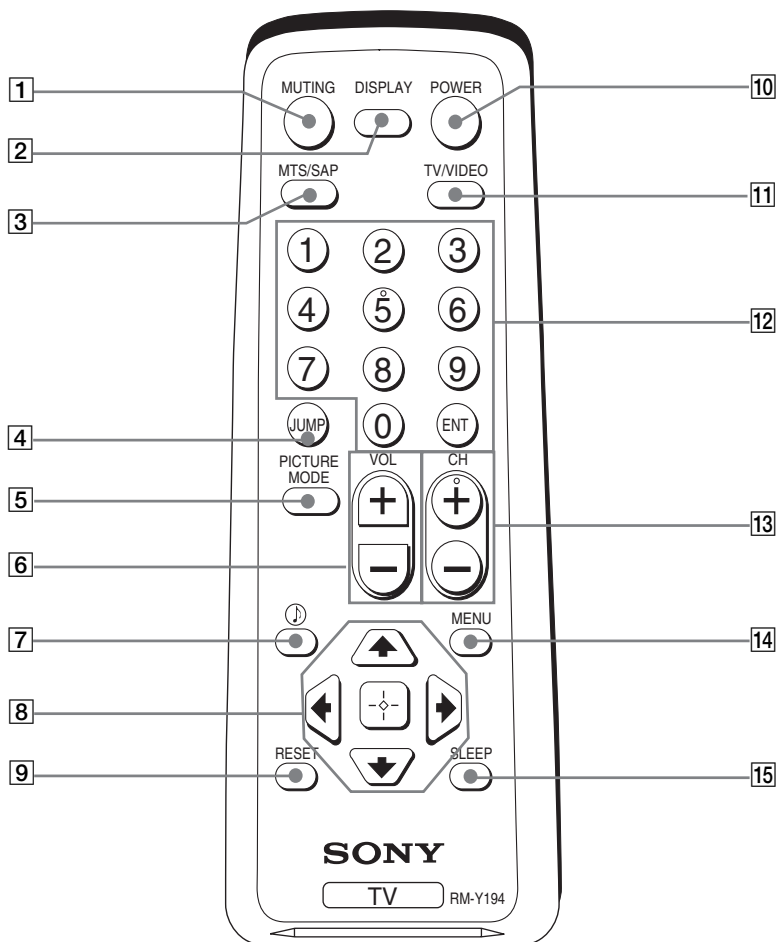Remote Control Description



 Remote Control Description


Button	Description
1 MUTING	Instantly turns off the sound. Press again or press  to restore the sound.
2 DISPLAY	Press to display the current time (if set) and channel number. Press again to turn DISPLAY off.
3 MTS/SAP	Cycles through the Multi-channel TV Sound (MTS) options: Stereo, Mono, and Auto SAP (Second Audio Program).
4 JUMP	Press to jump back and forth between two channels. The TV alternates between current channel and the last channel that was selected.
5 PICTURE MODE	Cycles through the available Video Mode settings.
6 VOL (volume)	Press when you want to adjust the volume.
7 	Press for a direct selection of Effect settings (Simulated, SRS, Off).
8 	Moves the cursor in the on-screen menus. Press the arrow buttons to move the cursor, then press the center button to select or access an option.
9 RESET	Press to return to factory settings while in an on-screen menu.
10 POWER	Press when you want to turn the TV on or off.
11 TV/VIDEO	Cycles through available video inputs.
12 0-9 and ENTER	Change the channels directly. Press 0-9 buttons to select a channel, then press ENTER.
13 CH (channel)	Press when you want to change channels.
14 MENU	Displays the on-screen menu. Press again to exit the menu at any time.
15 SLEEP	Turns the TV off automatically in approximately 15, 30, 45, 60, or 90 minutes. Cancel by pressing until Sleep off appears.

 If you lose your remote control, see page 36.

Connecting Your TV

Read this section before setting up your TV for the first time. This section explains how to make the basic connections and how to connect optional equipment.

 TV Rear Panel

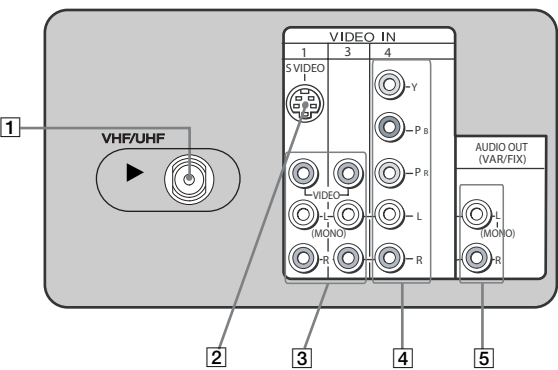


Jack	Description
1 VHF/UHF	This input connects to your VHF/UHF antenna or cable.
2 S VIDEO	This input connects to the S VIDEO OUT jack on your VCR or other video equipment that has S VIDEO. S VIDEO provides better picture quality than the VHF/UHF jacks or the video input jack. S VIDEO does not provide sound, so you still must connect the audio cables.
3 VIDEO/AUDIO L(MONO), R	This input connects to the AUDIO/VIDEO output jacks on your VCR or other video equipment. A third video input jack (VIDEO 2) is located on the front panel of the TV. These AUDIO/VIDEO input jacks provide better picture quality than the VHF/UHF jack.
4 YPbPr/ L, R	This input connects to the component video YPbPr, and AUDIO L, R jacks on your DVD player or digital set-top box (480i only).
5 AUDIO OUT (VAR/FIX) L(MONO), R	This jack connects to the AUDIO input jacks on your audio equipment. You can listen to your TV's audio through your stereo system.


Basic Connections


TV with Cable, Indoor, or Outdoor Antenna

 Depending on the cable system available in your home, choose one of the connections below:

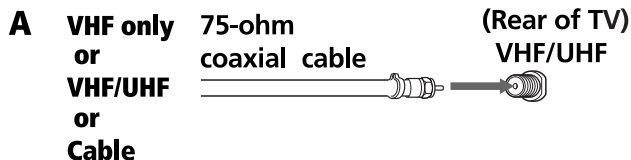

 
Use option A to connect the TV to a cable system or an antenna with a 75-ohm cable.

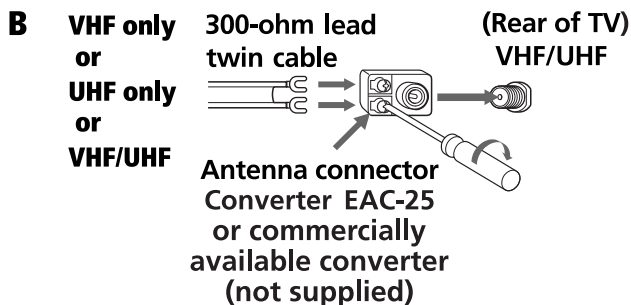


 Converter EAC-25 is commercially known as a 300-to-75 ohm antenna adapter.

Use option B to connect the TV to a dipole antenna, also known as a “rabbit ears antenna”.

 If you are connecting to an indoor or outdoor antenna, you may need to adjust the orientation of the antenna for the best reception.

Connecting Additional Equipment

 Connecting a TV and VCR

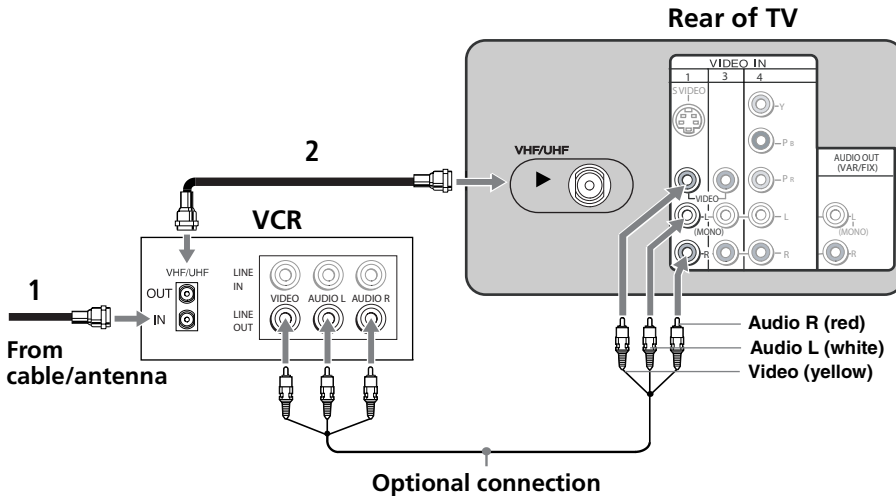

- 1** Connect the coaxial cable from your TV antenna or cable service to the IN jack on your VCR.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your VCR to the VHF/UHF jack on the TV.

Optional connection

 
- ❑ If your VCR is equipped with video outputs, you can get better picture quality by connecting audio/video cables (not supplied) from AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- ❑ For better picture quality, use S VIDEO (located on the rear panel), instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

You can use the button to switch between the VHF/UHF and VIDEO inputs.



To watch video programs from your VCR, tune your TV to Channel 3 or 4 (as set on the rear of your VCR).

Connecting a TV and Cable Box

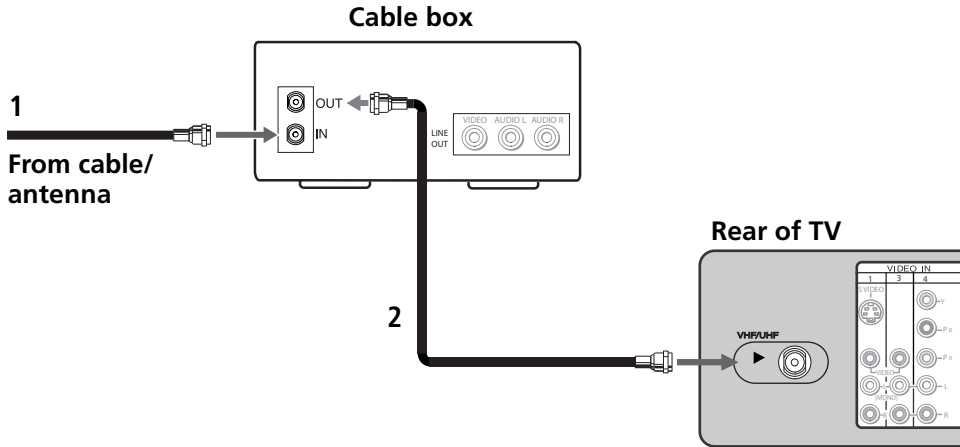
Some cable TV systems use scrambled or encoded signals that require a cable box to view all channels. If you subscribe to such type of service, use this connection.



- 1** Connect the coaxial cable from your cable service to the IN jack on your cable box.
- 2** Connect a coaxial cable (not supplied) from the OUT jack on your cable box to the VHF/UHF jack on your TV.

 
-  To view channels from your cable box, tune your TV to channel 3 or 4 (as set on the rear panel of your cable box) and use the cable box's remote control to change channels.
-  If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature by setting your TV to channel 3 or 4 (see page 25).

Connecting a TV, VCR, and Cable Box

 **DIGITAL CABLE BOX USERS:** If you are connecting a digital cable box, you will need a special bi-directional splitter (5-900 Mhz minimum) that is designed to work with your digital cable box.

Use this connection if you subscribe to a cable system that scrambles some channels (pay channels), but not all of them. This setup allows you to:

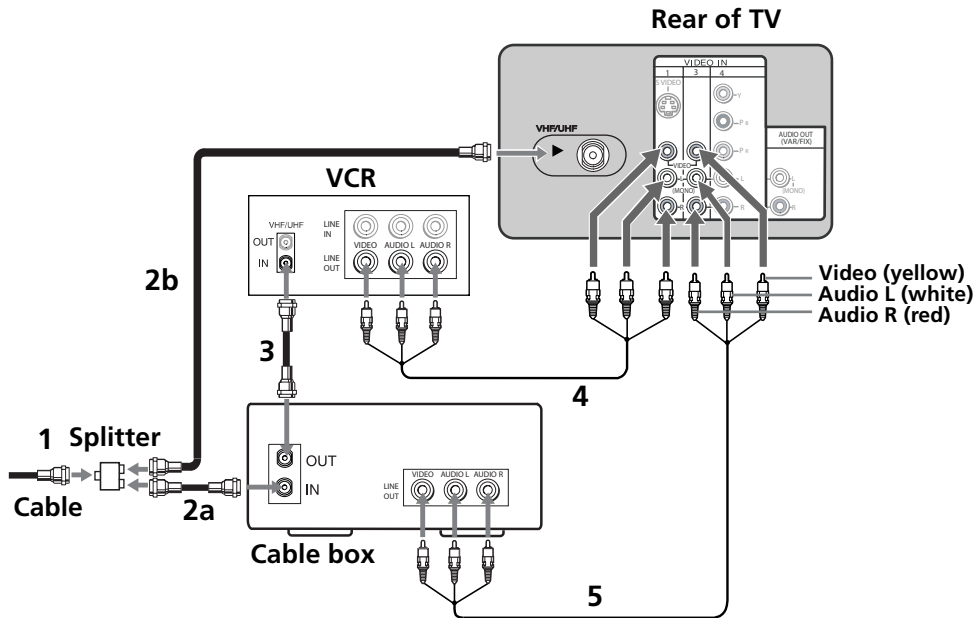

- ❑ change channels through your cable box or VCR when you are receiving a scrambled signal
- ❑ change channels through your TV



 
- 1** Connect the single input jack of the splitter (not supplied) to your incoming cable connection.
- 2** Using coaxial cables (not supplied), connect the two output jacks of the splitter (not supplied) to:
 - a)** the IN jack on your cable box
 - b)** the VHF/UHF jack on the TV
- 3** Using a coaxial cable (not supplied), connect the OUT jack on your cable box to the IN jack on your VCR.
- 4** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- 5** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your cable box to AUDIO/VIDEO IN on your TV.

Optional connection

- ❑ For better picture quality, use S VIDEO (located on the rear panel), instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.



-  To view channels from your cable box, tune your TV to channel 3 or 4 (as set on the rear panel of your cable box) and use the cable box's remote control to change channels.
-  If you will be controlling all channel selection through your cable box, you should consider using the Channel Fix feature by setting your TV to channel 3 or 4 (see page 25).

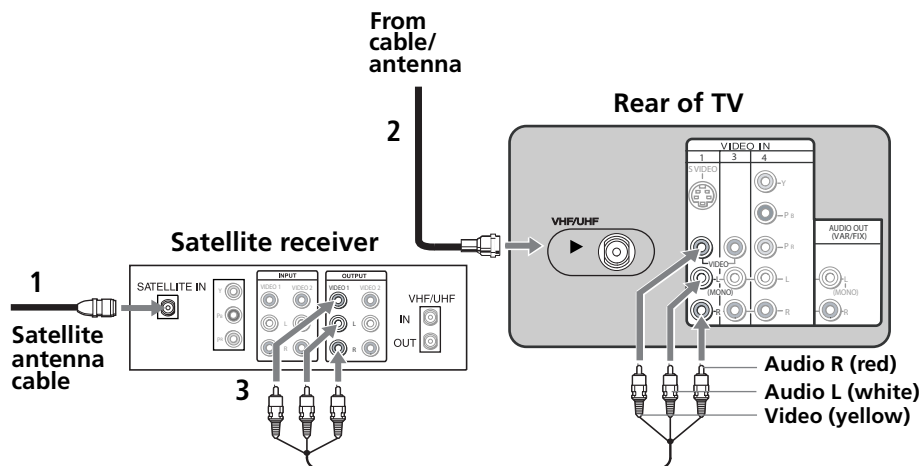Connecting a TV and Satellite Receiver



 
- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the VHF/UHF jack on your TV.
- 3** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your satellite receiver to AUDIO/VIDEO IN on your TV.

 To watch video programs from your Satellite receiver, tune your TV to channel 3 or 4.

 You can use the  button to switch between the VHF/UHF and VIDEO inputs.

Connecting a TV, VCR, Cable/Antenna, and Satellite Receiver using Composite Video (VIDEO/AUDIO L(MONO), R)

Connections

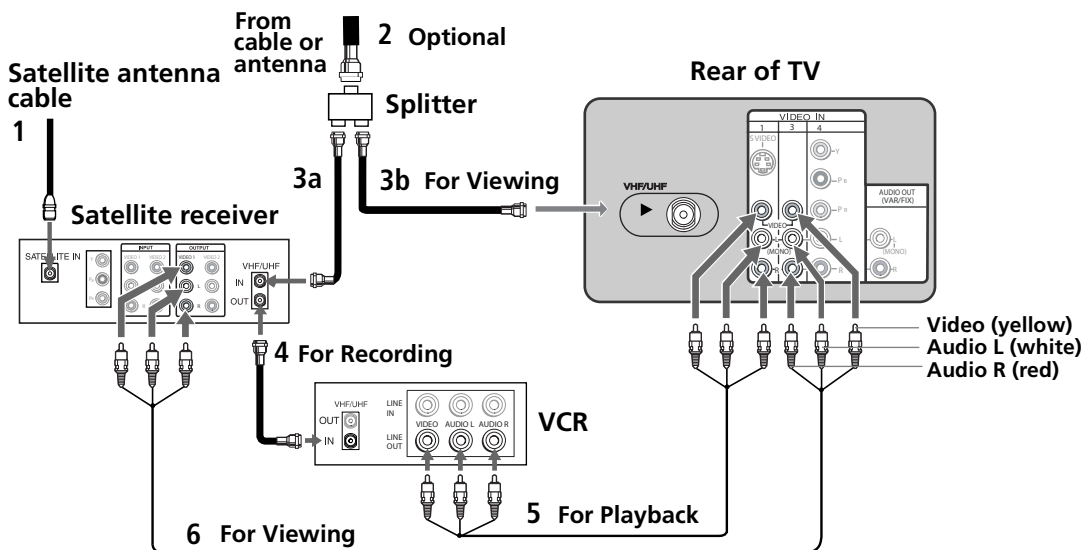


- 1** Connect the cable from your satellite antenna to SATELLITE IN on your satellite receiver.
- 2** Connect the single input jack of the splitter (not supplied) to your incoming cable/antenna (optional connection to view local channels or broadcast).
- 3** Using coaxial cables (not supplied), connect the two output jacks of the splitter (not supplied) to:
 - a)** the IN jack on your satellite receiver
 - b)** the VHF/UHF jack on the TV
- 4** Using a coaxial cable (not supplied), connect the OUT jack on your satellite receiver to the VHF/UHF IN on your VCR.
- 5** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- 6** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your satellite receiver to AUDIO/VIDEO IN on your TV.




To view from the satellite receiver or VCR, select the video input to which your satellite receiver or VCR is connected by pressing **TV/VIDEO** on the remote control.

 Connecting a TV, VCR, and Satellite Receiver using Component Video (YPbPr)

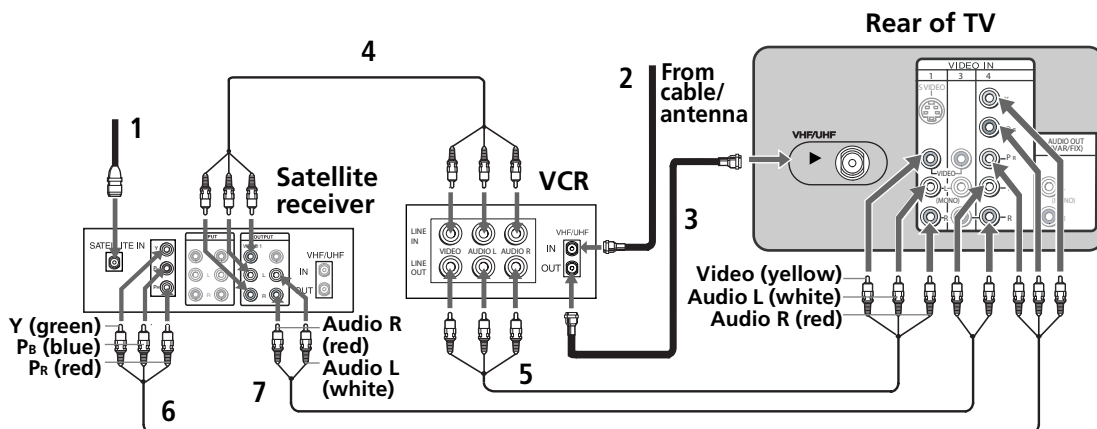


- 1** Connect the coaxial cable from your satellite antenna to SATELLITE IN on the satellite receiver.
- 2** Connect the coaxial cable from your cable service or antenna to the IN jack on your VCR.
- 3** Using a coaxial cable (not supplied), connect the OUT jack on your VCR to the VHF/UHF jack on your TV.
- 4** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your satellite receiver to AUDIO/VIDEO IN on your VCR.
- 5** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your VCR to AUDIO/VIDEO IN on your TV.
- 6** Using component video cables (not supplied), connect YPbPr OUT on your satellite receiver to YPbPr IN on your TV.
- 7** Connect AUDIO OUT on your satellite receiver to AUDIO IN on your TV.



To view from the satellite receiver or VCR, select the video input to which your satellite receiver or VCR is connected by pressing  on the remote control.

Connecting a DVD Player using Composite Video (VIDEO/AUDIO L(MONO),R)

 Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your DVD player to AUDIO/VIDEO IN on your TV.

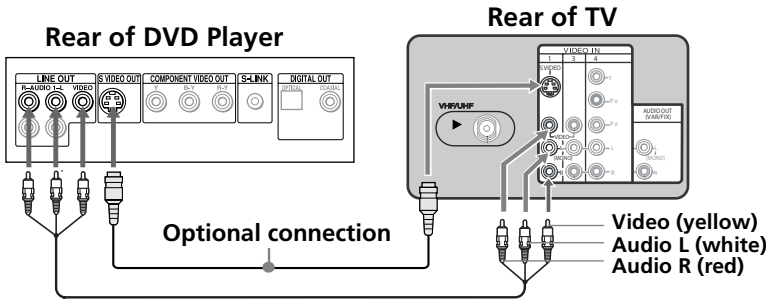


Optional connection


- ❑ For better picture quality, use S VIDEO instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

Connecting a DVD Player using Component Video (YPbPr, L)

 
If your DVD player is equipped with component video outputs (YPbPr), you can improve the picture quality by using component video cables (480i only).

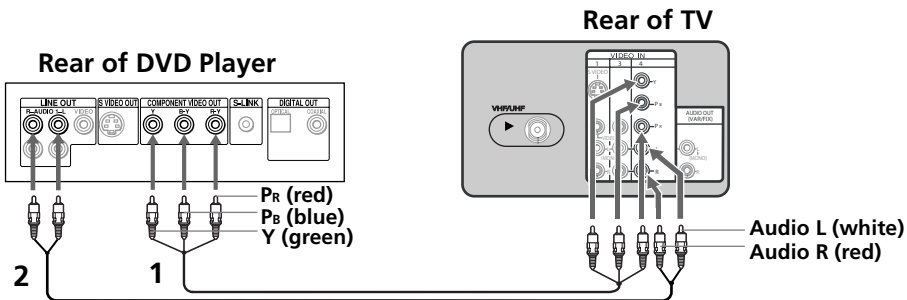


- 1 Make sure your DVD player is set up (see page 35). Using component video cables (not supplied), connect YPbPr OUT on your DVD player to YPbPr IN on your TV.
- 2 Connect AUDIO OUT on your DVD player to AUDIO IN on your TV.

 The YPbPr outputs on your DVD player are sometimes labeled Y, Cb, and Cr or Y, B-Y, and R-Y. If so, connect the cables to like colors.

Connecting an Audio System


 If you are connecting a Home Theater, please refer to your Home Theater manual for additional connections.

 - 1** Using audio/video cables (not supplied), connect AUDIO OUT on your TV to one of the unused line inputs (e.g. TV, AUX, TAPE2) on your stereo.
- 2** Set the Speaker option to Off. For more instructions, see "Using the Audio Menu" on page 23.
- 3** After you connect the audio system, you can control the volume level from your TV or audio system.
 - ☐ To control the volume from the TV, use the front panel controls or the VOL +/- buttons on the remote.
 - ☐ To control the volume through the connected audio system, open the Audio Out option on the Audio Menu and select Fixed. For more instructions, see "Using the Audio Menu" on page 23.

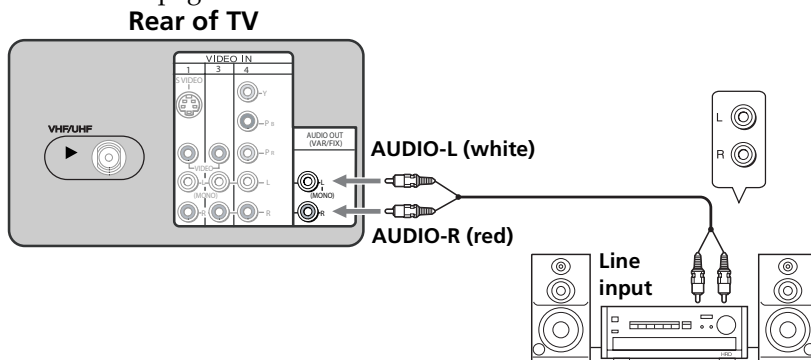


Connecting a Camcorder (for playback)

 To connect your camcorder, you can use the Audio/Video inputs on either the front or rear panel of the TV. Using the audio/video cables (not supplied), connect AUDIO/VIDEO OUT on your camcorder to AUDIO/VIDEO IN on your TV.

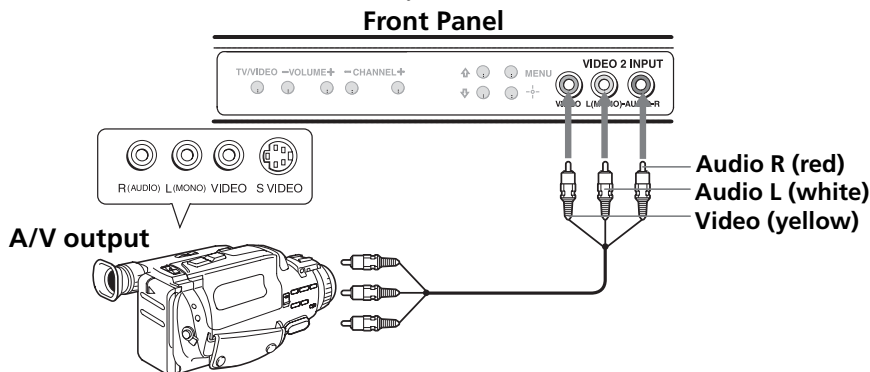

- ☐ For better picture quality, use S VIDEO (located on the rear panel), instead of the yellow video cable. S VIDEO does not provide sound, so you still must connect the audio cables.

 Connecting for Video Tape Editing (VCR and Camcorder)

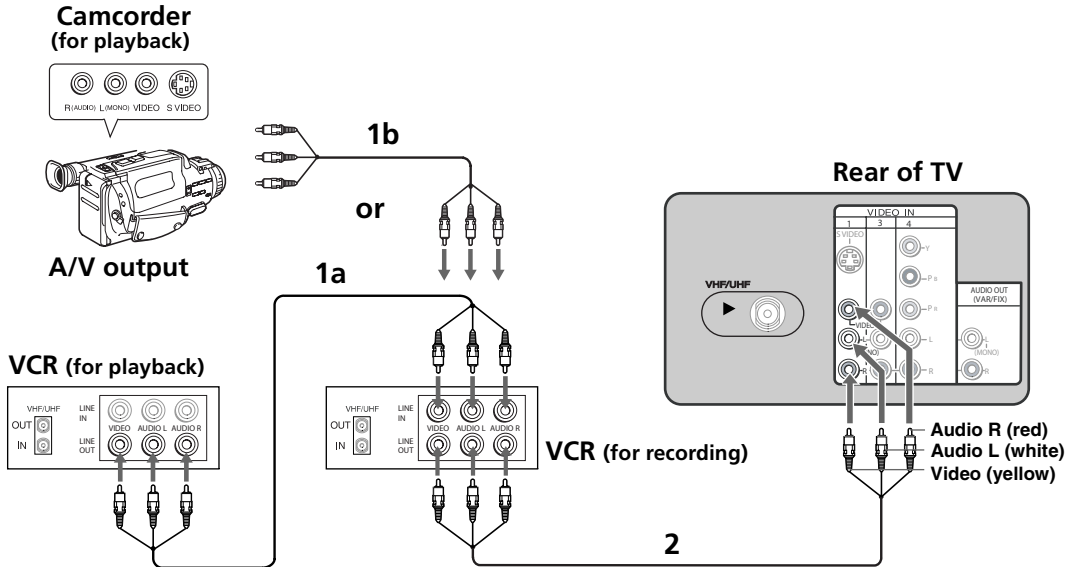


- 1** For video tape editing, connect the VCR to the following sources:
 - a)** If you are connecting a VCR, use audio/video cables (not supplied) to connect AUDIO/VIDEO OUT on your first VCR to AUDIO/VIDEO IN on your second VCR.
 - b)** If you are connecting a camcorder, use audio/video cables (not supplied) to connect AUDIO/VIDEO OUT on your camcorder to AUDIO/VIDEO IN on your VCR.
- 2** Using audio/video cables (not supplied), connect AUDIO/VIDEO OUT on the second VCR to AUDIO/VIDEO IN on your TV.

Using Basic Functions

Setting Up the TV


After you have finished connecting your TV, you can use Auto Program to set up your channels. During Auto Program, the TV will automatically search for available channels and program receivable channels.

 When you start Auto Program wait until it is finished; otherwise it will skip over channels that are available. Perform Auto Program again to program receivable channels.



 
 
 
 

 


- 1 Press  to turn on the TV. The Initial Setup screen appears.





- 2 Press  on the remote control or on the TV front panel to start Auto Program, or press  to exit.

 The Initial Setup screen appears each time you turn on the TV until you perform Auto Program.

To perform Auto Program again



















 
 









 









 
- 1 Press .
- 2 Press  to highlight Channel Menu.
- 3 Press  to highlight Cable. Press  to select.
- 4 Press  or  to highlight On or Off according to how you connected your TV. Press  to select.
- 5 Press  to highlight Auto Program. Press  to search for channels.
- 6 After Auto Program finishes, press  to exit.


 
 








 

 



 


To reset the TV to factory settings

- 1 Turn the TV on.
- 2 Hold down  on the remote control.
- 3 Press and release the POWER button on the TV front panel. The TV will turn itself off, then back on.
- 4 Release .

Quick Start to the Menus

The following settings are available in your on-screen menus. For more details on how to use the menus, see “Using the Menus” on page 21.


Menu	Allows you to
      Video Mode:Vivid Picture Brightness Color Hue Sharpness Color Temp:Cool ClearEdge VM:High Move   Select  End 	Adjust your picture settings.
      Audio Treble Bass Balance Steady Sound:Off Effect:Off MTS:Stereo Speaker:On Audio Out:Fixed Move   Select  End 	Change your audio settings.
      Channel Setup Favorite Channels Cable:On Channel Fix:Off Auto Program Channel Skip/Add Channel Label Move   Select  End 	Customize your channel settings.
      Parental Control Password: ---- Move   Select  End 	Set rating limits on your TV based on program rating or content.

Menu	Allows you to
      <div>Timer</div> <div>Timer 1:Set</div> <div>Timer 2:Set</div> <div>Current Time</div> <div>Move  </div> <div>Select </div> <div>End </div>	<p>Set the clock on your TV and program scheduled viewing using Timer 1 and Timer 2.</p>
      <div>Setup</div> <div>Caption Vision:Off</div> <div>Info Banner:Off</div> <div>Video Label</div> <div>Tilt Correction</div> <div>Language:English</div> <div>16:9 Enhanced:Off</div> <div>Move  </div> <div>Select </div> <div>End </div>	<p>Select closed captioning options (Caption Vision), display the name of the current program and its remaining time (Info Banner), label video inputs, adjust tilt correction, select menu language, enhance DVD picture resolution (16:9 Enhanced).</p>

Using the Menus

This section shows the options available for setting up and adjusting the TV.

 Using the Remote Control to Navigate the On-Screen Menus

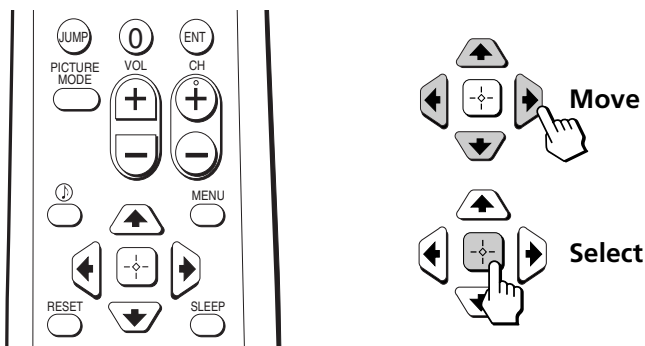

To navigate on the on-screen menus, use the arrow buttons (↑, ↓, ←, →) to move the cursor. Pressing these arrows will cause the cursor to move in the corresponding direction. Press the center button (⊙) to select an option.

How to Access Menus

To Access Menus


- 1 Press to display the on-screen menu.
- 2 Use the ← or → buttons to highlight the desired menu icon. Press to select it.
- 3 Use the ↑ or ↓ buttons to scroll up and down through the features.
- 4 Follow the instructions on the screen.
- 5 For instructions on using a specific menu, see the page in this section that talks about that menu.
- 6 Press to exit the menu.

Press once to display the on-screen menu, and press again to return to normal viewing. If no buttons are pressed, the menu closes automatically after about 90 seconds.


Using the Video Menu



To access the Video menu, use the following steps:

 
To Display


 





To Select

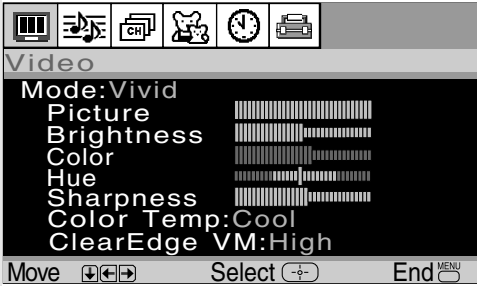

 

 












  
Press  to highlight an option, then press .



Mode <i>Customized picture viewing</i>	Use the  or  buttons to highlight one of the following options, then press  to select it.
Vivid:	Select for enhanced picture contrast and sharpness.
Standard:	Select for a standard picture.
Movie:	Select for a finely detailed picture.
Pro:	Select for natural picture and sharpness.

 Press  on the remote control for direct access to the picture modes (Vivid, Standard, Movie, Pro).

Picture	Press  to decrease the contrast. Press  to increase the contrast.
Brightness	Press  to darken the picture. Press  to brighten the picture.
Color	Press  to decrease color saturation. Press  to increase color saturation.
Hue	Press  to increase the red tones. Press  to increase the green tones.
Sharpness	Press  to soften the picture. Press  to sharpen the picture.
Color Temp. <i>White tint adjustment</i>	Use the  or  buttons to highlight one of the following options, then press  to select it.
Cool:	Gives white colors a blue tint.
Neutral:	Gives white colors a neutral tint.
Warm:	Gives white colors a red tint.
ClearEdge VM	Sharpens picture definition to give objects a crisp, clean edge. Use the  or  buttons to highlight: High , Low , or Off , then press  to select it.

Using the Audio Menu

To access the Audio menu, use the following steps:

To Display





To Highlight 








 



 




To Select






Press  to highlight an option, then press .






Treble	Press  to decrease the higher pitched sounds. Press  to increase the higher pitched sounds.
Bass	Press  to decrease the lower pitched sounds. Press  to increase the lower pitched sounds.
Balance	Press  to emphasize the left speaker. Press  to emphasize the right speaker.
Steady Sound <i>Stabilizes volume</i>	Use the  or  buttons to highlight one of the following options, then press  to select it. On: Select to stabilize the volume when changing channels. Off: Select to turn Steady Sound off.
Effect	Use the  or  buttons to highlight one of the following options, then press  to select it. Simulated: Simulates theater-quality sound for mono programs. SRS: Produces a dynamic three-dimensional sound for stereo programs. Off: Normal stereo or mono reception.


 Press  to directly select Effect settings (Simulated, SRS, Off).

MTS <i>Multi-Channel TV Sound</i>	Use the  or  buttons to highlight one of the following options, then press  to select it. Stereo: Select when viewing a broadcast in stereo. Auto SAP: Select to have the TV automatically switch to a Second Audio Program (SAP) when a signal is received. Mono: Select to reduce noise in areas of poor reception.
---------------------------------------------	--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

 Press  to directly select MTS settings (Stereo, Auto SAP, Mono).

  If your TV is set to Auto SAP, some programs may be muted or distorted. If your TV does not output sound, change your Audio MTS setting to Stereo or Mono.


Speaker <i>Custom selection of audio output source</i>	Use the ▲ or ▼ buttons to highlight one of the following options, then press  to select it. On: Select to listen to the sound from the TV speakers with or without a separate stereo system. Off: Select to turn off the TV speakers and listen to the TV's sound only through external audio system speakers.
Audio Out <i>Use to control the TV's volume through a stereo</i>	Use the ▲ or ▼ buttons to highlight one of the following options, then press  to select it. Variable: Adjust the volume through your TV. Fixed: Adjust the volume through a connected stereo.

 You can only set Audio Out settings when you have set Speaker to Off.

Using the Channel Setup Menu

To access the Channel Setup menu, use the following steps:







 

Press **↓** to highlight an option, then press .



Favorite Channels

Quick access to favorite channels


- 1 Use the **↑** or **↓** buttons to highlight the position (1-5) where you want to set a favorite channel, then press .
- 2 Use the **↑** or **↓** buttons to find the channel you want to add to your favorite channels.
- 3 Press  to select the channel. The TV will automatically change to the selected channel and assign it to the selected position (1-5).
- 4 Press **←** to return to the Channel Setup menu or press  to exit.

 To use Favorite Channels, exit all menus and press . Press **↑** or **↓** to move the cursor to the desired channel number and press .


Cable

Use the **↑** or **↓** buttons to highlight one of the following options, then press  to select it.

- On:** Select if you are receiving cable channels with a CATV cable.
Off: Select if you are using a TV antenna.


 After changing your cable settings, you will need to perform Auto Program. See "To perform Auto Program again" on page 17.

Channel Fix

Use the **↑** or **↓** buttons to highlight one of the following options, then press  to select it.

- Off:** Channel Fix is not set.
- 2-6:** Select when you want to control all channel selection through a cable box or VCR. Select the appropriate channel (usually 3 or 4) and use the cable box's or VCR's remote control for channel selection.
- Video 1:** Select from available video inputs when you have connected video equipment (e.g., a satellite receiver) and you want your TV fixed to it.


 You cannot use Favorite Channels, Cable, Channel Skip/Add, or Channel Label when Channel Fix is set.


Auto Program	Perform Auto Program whenever setting up your TV. Auto Program will search for available channels and program receivable channels.
Channel Skip/Add	<p>Use this feature after you run Auto Program to skip unwanted channels or add new ones.</p> <ol style="list-style-type: none"> 1 Use the ▲ or ▼ buttons to highlight the position of the desired channel, then press [CH-]. 2 Use the ▲ or ▼ buttons to highlight Skip or Add, then press [CH-]. 3 Press ◀ to return to the Channel Setup menu or press MENU to exit.
<p> Press CH + or CH – to skip over channels that have been skipped. You can still use the 0-9 buttons to directly tune to skipped channels.</p>	
Channel Label <i>Label up to 40 channels with their call letters</i>	<ol style="list-style-type: none"> 1 Press [CH-], then use the ▲ or ▼ buttons until you reach the desired channel number. 2 Press [CH-] to activate the channel. 3 Press ▼ to highlight Label, then press [CH-]. Use the ▲ or ▼ buttons to display the first call letter or number of the label. Press [CH-] to select. Repeat this process until you finish selecting all the call letters. 4 When finished, press [CH-] to activate. 5 Press ◀ to return to the Channel Setup menu or press MENU to exit.



Using the Parental Control Menu

To access the Parental Control menu, use the following steps:


To Display






To Highlight 



 
To Select







Press  to highlight an option, then press .



Parental Control

Password: 

Use [0-9] buttons to enter new password

Move   Select  End 

The Parental Control feature helps parents monitor what their children watch on television.

To use the Parental Control Menu

When you select the Parental Control menu, you are prompted to set a 4-digit password. You cannot access the Parent menu settings without this password.

- 1 Use the 0-9 buttons to enter a 4-digit password.
- 2 Confirm your password by entering it again.




Keep this manual in a safe place. You need your password for any future access to the Parental Control menu. If you forget your password, see page 35.

Parental Control




Setting the Rating

You can change the Rating by selecting one of the Parental Lock options.



- 1 With **Lock** highlighted, press .

If you are not familiar with Parental Guideline rating system, use one of the following preset categories to simplify the rating selection: Child, Youth, Young Adult.

- 2 Use the  or  to highlight the desired rating and press .






Rating	TV will allow a maximum rating of
Off	No rating limit
Child	TV-Y, TV-G, G (U.S.), G, C (Canada)
Youth	TV-PG, PG (U.S.), 8 ans + (Canada)
Young Adult	TV-14, PG-13 (U.S.), 14+ (Canada)
Custom	Select to set more restrictive ratings (see next section)

Changing your Password

- 1 Use the  or  buttons to highlight **Change Password** and press .
- 2 Follow steps 1 and 2 for “Using the Parental Control Menu” on page 27.

Select a Country


Select U.S.A. to use US ratings (see pages 30-31) or select Canada to use Canadian ratings (see page 32). If you select a Country (U.S. or Canada) that is not where you live, the rating you select will not be activated.

- 1 Press  to highlight **Country**, then press .
- 2 Use the  or  to highlight the desired country and press .

Information for Parents


To view a program that exceeds the TV rating

- ❑ Press **ENT**, then use the **0**-**9** buttons to enter your password.

 Entering your password to view a blocked program will temporarily turn **Lock** to Off. To reactivate your Lock settings, turn the TV off then back on; the TV will return to the settings that you have selected.

Using the Custom Menu

Follow the instructions on the screen to make your custom settings. Select the country desired for your TV's rating limit. For more information see page 30 for (U.S. models) and page 32 for (Canadian models).

 Once you have blocked a rating or content, all higher ratings or content will be automatically blocked.


United States: Selecting Custom Rating Options

For the United States, the Custom Rating menu includes the following options: Movie Rating, TV Rating, and Unrated. (For Canada, see page 32.)

Movie Rating


This system defines the rating levels of movies shown in theaters and on prime cable channels.

Rating	Defined as
G	General audience
PG	Parental guidance suggested
PG-13	Parents strongly cautioned
R	Restricted
NC-17	No one 17 and under admitted
X	Adult audience only

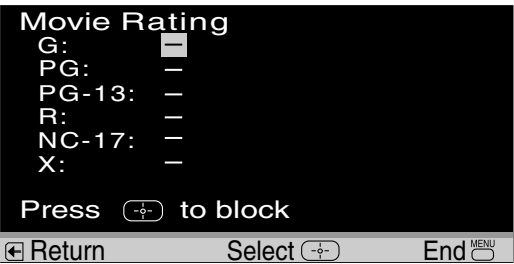 

TV Rating

 The TV rating is divided into two groups: age-based and content-based.

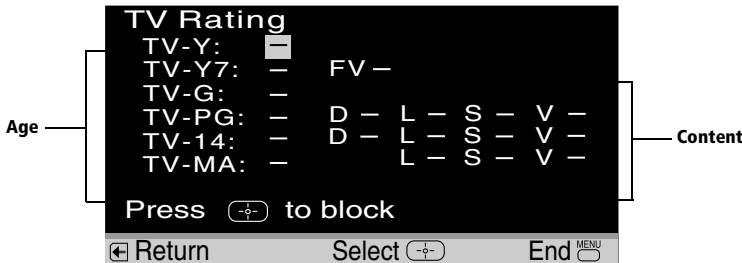

Age	Defined as
TV-Y	All children
TV-Y7	Directed to older children
TV-G	General audience
TV-PG	Parental guidance suggested
TV-14	Parents strongly cautioned
TV-MA	Mature audience only

Content	Defined as
FV	Fantasy violence
D	Suggestive dialogue
L	Strong language
S	Sexual situations
V	Violence

The content ratings will increase depending on the level of the age-based rating. For example, a program with a TV-PG V (Violence) rating may contain moderate violence, while a TV-14 V (Violence) rating may contain intense violence.

Unrated

You have the option of blocking TV programs or movies that are not rated.

Allow	Allows all unrated programs
Block	Blocks all unrated programs



If you choose to block unrated TV programs, please be aware that the following programs may be blocked: emergency broadcasts, political programs, pro, news, public service announcements, religious programs, and weather.


Canada: Selecting Custom Rating Options

For Canada, the Custom Rating menu includes the following options: English Rating, French Rating, and U.S.A. Rating.

English Rating

These ratings are for Canadian programs that are broadcast in English.


Rating	Defined as
C	Children
C8+	Children 8 years and older
G	General programming
PG	Parental guidance
14+	Viewers 14 and older
18+	Adult programming

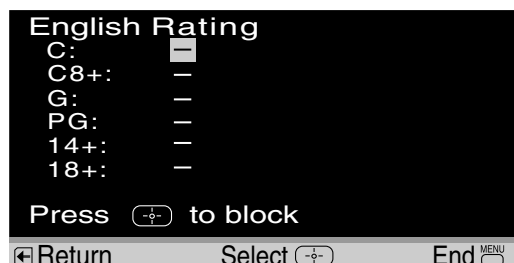 

French Rating

These ratings are for Canadian programs that are broadcast in French.

Rating	Defined as
G	General
8 ans+	Not recommended for younger children
13 ans+	Not recommended for children under age 13
16 ans+	Not recommended for ages under 16
18 ans+	This program is restricted to adults

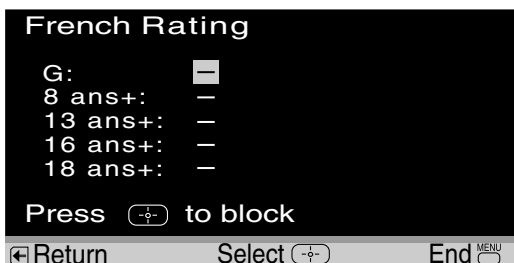 

U.S.A. Rating

For programs from the United States, see “TV Rating” on page 30.

Using the Timer ⌚ Menu

To access the Timer menu, use the following steps:

To Display



To Highlight ⌚



To Select



Press to highlight an option, then press .



Current Time

Set your TV to the current day and time. Press to open the Current Time menu:

- 1 Use the or buttons to enter the correct day and time, then press .
- 2 Press to exit the menu.



You must set the Current Time before you can use Timer 1 or Timer 2.

Timer 1 and Timer 2

Scheduled viewing

Use the timers to program your TV to turn on and off by day, time, duration, and channel. The timer duration is a maximum of six hours. When the channel is fixed, it is not necessary to set the channel.

- 1 Use the or buttons to highlight **Timer 1** or **Timer 2**, then press .
- 2 Use the or buttons to enter the desired day, start time, duration, and channel, then press . The timer status should be On when the Timer has been set, and the timer light on the front panel of the TV should be on.
- 3 Press to exit the menu.



Select Off to turn off the Timer. Your previous settings will be saved.



When you perform Auto Program, Timer 1 and Timer 2 settings will be cleared. Also, in the event of any loss of power, Current Time, Timer 1, and Timer 2 settings will be cleared.

Using the Setup Menu

To access the Setup menu, use the following steps:

To Display





To Highlight 



To Select






Press  to highlight an option, then press .



Caption Vision

Closed-Captioning

Allows you to select from three closed-caption modes for programs that are broadcast with closed captioning.


 

Use the  or  buttons to highlight one of the following options, then press  to select it.

Off: Caption Vision is not activated.

CC1, 2, 3, 4: Displays printed dialogue and sound effects of a program.

Text1, 2, 3, 4: Displays network/station information.



Info Banner




Displays the name of the current program and its remaining time (if available) when you change the channel or press the DISPLAY button. Use the  or  buttons to highlight **On** or **Off**. Then press .

Video Label

Label connected equipment




Allows you to identify the video components connected to the TV: VCR, DVD, etc. When you press TV/VIDEO to switch inputs, the Video Label appears on-screen.

1 Press the  or  buttons to highlight the input you want to label and press .

2 Press the  or  buttons to highlight a label and press .

3 Press  to return to the Setup menu or press  to exit.

Tilt Correction

Use the  or  buttons to set the tilt of the picture from -5 to +5, then press  to activate.

Language

Display all menus in the language of your choice.

Use the  or  buttons to select from one of the following options: **English**, **Español** (Spanish) and **Français** (French). Then press .

16:9 Enhanced

Provides enhanced picture resolution for wide-screen sources such as DVD. This is only available when the TV is in Video mode.

Other Information

Troubleshooting

If you have a problem with your TV, try the suggestions below. If the problem persists, see “Contacting Sony” at the end of this section.

General

Problem	Possible Remedies
I want to reset the TV to the factory settings	❑ Turn on the TV. While holding down the RESET button on the remote control, press the POWER button on the TV front panel. The TV will turn itself off, then back on again. Release the RESET button.
The TV is dirty	❑ Clean the TV with a soft dry cloth. Never use strong solvents such as thinner or benzine, which might damage the finish of the cabinet.
I lost the parental control password	❑ In the password screen, enter the following master password: 4357. After using the master password, you must create a new password. You cannot use the master to unlock currently blocked channels.
There is a black box on the screen	❑ You have selected a text option in the Setup menu (page 34) and no text is available. To turn off this feature, select Off in the Caption Vision option. If you were trying to select closed captioning, select CC1-4 instead of Text1-4.
There was a blackout or power outage, and now the TV won't turn on and the timer LED is flashing	❑ Press the POWER button on your remote control or on the TV front panel. If the problem persists, see “Contacting Sony” at the end of this section.
The digital cable box does not work	❑ If you are connecting a VCR and digital cable box using a splitter, as described in page 9, you must use a special bi-directional splitter (5-900Mhz minimum) that is designed to work with your digital cable box.
I can't connect the DVD player using component video outputs (YPbPr)	❑ You must set up your DVD player before you can connect it using component video outputs (YPbPr). Disconnect the DVD player and set it up, referring to the DVD manual for instructions. Then, connect it to the TV again following the instructions in “Connecting a DVD Player using Component Video” on page 14.



Remote Control

Problem	Possible Remedies
I cannot operate the remote control	<ul style="list-style-type: none"> ❑ Check the orientation of the batteries. ❑ Batteries could be weak. Replace them (page 2). ❑ Move the TV three to four feet away from fluorescent lights.
I cannot change channels with the remote control	<ul style="list-style-type: none"> ❑ Make sure you have not inadvertently switched your TV from the channel 3 or 4 setting if you are using another device to change channels.
I lost the remote control	<ul style="list-style-type: none"> ❑ You can use the front panel controls to access your menus, change channels, adjust the volume, or change video inputs (page 2). Contact your nearest Sony Dealer to order a replacement. To find out the nearest dealer, please call our Sony Direct Accessory and Part Center at 1-800-488-7669 (U.S. residents only).

Video

Problem	Possible Remedies
No picture, no sound	<ul style="list-style-type: none"> ❑ Make sure the power cord is plugged in. ❑ If a red light flashes on the front of your TV for more than a few minutes, disconnect and reconnect the power cord. If the problem continues, call your local service center. ❑ Check the TV/VIDEO setting. When watching TV, set it to TV; when watching video equipment, set it to VIDEO 1, 2, 3 or 4 (page 4). ❑ Make sure you have inserted the batteries correctly into the remote control (page 2). ❑ Try another channel to rule out station trouble.
Poor or no picture, good sound	<ul style="list-style-type: none"> ❑ Adjust the Picture setting in the Video menu (page 22). ❑ Adjust the Brightness setting in the Video menu (page 22). ❑ Check the antenna and/or cable connections (page 6).
No color	<ul style="list-style-type: none"> ❑ Adjust the Color setting in the Video menu (page 22).
Snow on the screen	<ul style="list-style-type: none"> ❑ Check the Cable setting in the Channel menu (page 25). ❑ Check the antenna and/or cable connections (page 6). ❑ Make sure the channel selected is currently broadcasting.
Dotted lines or stripes	<ul style="list-style-type: none"> ❑ Adjust the antenna. ❑ Move the TV away from other electronic equipment. Some electronic equipment creates electrical noise, which can interfere with TV reception.
Double images or ghosts	<ul style="list-style-type: none"> ❑ Check your outdoor antenna or call your cable service.

Audio

Problem	Possible Remedies
Good picture, no sound	<ul style="list-style-type: none"> <input type="checkbox"/> Press  so that Muting disappears from the screen (page 4). <input type="checkbox"/> Check your Audio settings. Your TV may be set to Auto SAP in the MTS feature (page 23). <input type="checkbox"/> Make sure the speaker option is set to On in the Audio Menu. <input type="checkbox"/> Press  to adjust your TV's volume.
Low or no audio (TV and cable box)	<ul style="list-style-type: none"> <input type="checkbox"/> Some cable boxes have volume level controls. Check and see if your cable box remote has a volume control.

Channels

Problem	Possible Remedies
I cannot receive higher number channels (UHF) when using an antenna	<ul style="list-style-type: none"> <input type="checkbox"/> Make sure Cable is set to Off in the Channel menu (page 25). <input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 17).
Cable stations don't seem to work	<ul style="list-style-type: none"> <input type="checkbox"/> Make sure Cable is set to On in the Channel menu (page 25). <input type="checkbox"/> Perform Auto Program to add channels that are not presently in the memory (page 17).

Contacting Sony

Before calling our Customer Information Services Center, reset the TV to factory settings (see page 17). Please have your TV serial number ready. The number is located on the rear of your TV and on the front cover of this manual.

Our Customer Information Services Center phone number is 1-800-222-SONY (7669) (US residents only) or 1-877-899 SONY (7669) (Canadian residents only).

Specifications

For all models (except as noted)

Television system	American TV standard/NTSC		
Channel coverage	VHF: 2-13/UHF: 14-69/CATV: 1-125		
Antenna	75-ohm external antenna terminal for VHF/UHF		
Picture tube	FD Trinitron® tube		
Power requirements	120V, 60 Hz		
Supplied accessories	2 Size AA (R6) batteries 1 Remote Control RM-Y194		
Inputs/outputs	Inputs	1 video, 1 audio (front) 2 video, 2 audio (rear) 1 S VIDEO 1 RF 1 YPbPr, 1 audio	Outputs 1 AUDIO OUT
Optional accessories	TV Stand: SU-32FS2 for KV-32FS120 SU-36FS2 for KV-36FS120		

KV-32FS120

Screen size	Visible screen size: 803 mm (32 inches) measured diagonally Actual screen size: 863.6 mm (34 inches) measured diagonally
Speaker output	10 W x 2
Power consumption	175 W Less than 1 W in standby
Dimensions (W/H/D)	898 x 696 x 576 mm (35 ³ / ₈ x 27 ³ / ₈ x 22 ⁵ / ₈ inches)
Mass	75 kg (165 lbs. 6 oz.)

KV-36FS120

Screen size	Visible screen size: 914.4 mm (36 inches) measured diagonally Actual screen size: 965.2 mm (38 inches) measured diagonally
Speaker output	10 W x 2
Power consumption	180 W Less than 1 W in standby
Dimensions (W/H/D)	985 x 774 x 633 mm (38 ³ / ₄ x 30 ¹ / ₂ x 24 ⁷ / ₈ inches)
Mass	97.8 kg (216 lbs. 15 oz.)

Design and specifications are subject to change without notice.

Index

16:9 Enhanced **34**

A

Audio Out **24**
Auto Program **17, 26**
Auto SAP **23**

B

Balance **23**
Bass **23**
Batteries
 Inserting in remote **2**
Brightness **22**

C

Cable **25**
Caption Vision **34**
Channel Fix **25**
Channel Label **26**
ClearEdge VM **22**
Color **22**
Color Temperature **22**
Connections
 Cable and antenna **6**
 Connecting a Camcorder **15**
 Connecting an Audio System **15**
 DVD Player using Component Video
 (YPbPr/L, R) **14**
 DVD Player using Composite Video
 (VIDEO/AUDIO L(MONO),R) **14**
 TV and Cable Box **8**
 TV and Satellite Receiver **11**
 TV and VCR **7**
 TV, VCR and Cable Box **9**
 TV, VCR, and Satellite Receiver using
 Component Video (YPbPr/L, R) **13**
 TV, VCR, Cable/Antenna, and Satellite
 Receiver using Composite Video
 (VIDEO/AUDIO L(MONO), R) **12**
 Video Tape Editing (VCR and
 Camcorder) **16**
Current Time **33**

E

Effect
 Off **23**
 Simulated **23**
 SRS **23**

F

Favorite Channels **25**

H

Hue **22**

I

Info Banner **34**

L

Language **34**

M

Menus
 Audio **23**
 Channel **25**
 Parent **27**
 Setup **34**
 Timer **33**
 Video **22**
Mode
 Movie **22**
 Pro **22**
 Standard **22**
 Vivid **22**
MTS
 Auto SAP **23**
 Mono **23**
 Stereo **23**

P

Parental Control **28**
Picture **22**

R

Remote Control
 Description **3, 4**

S

Setting the Rating
 English Rating **32**
 French Rating **32**
 Movie Rating **30**
 SLEEP **4**
 TV Rating **30**
 U.S.A. Rating **32**
 Unrated **31**
Sharpness **22**
Speaker **24**
Specifications **38**
Steady Sound **23**

T

Tilt Correction **34**
Timer 1 and Timer 2 **33**
Treble **23**
Troubleshooting **35**
TV Features **1**
TV Front Panel **2**
TV Rear Panel **5**

V

Video Label **34**

Sony Corporation

<http://www.sony.net>

Printed in U.S.A.